
1207MAX Series Air Ratchet Wrench - Exploded View

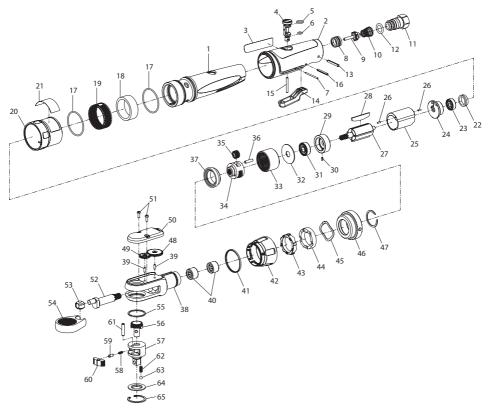

(Dwg. 45653425)





1207MAX Series Air Ratchet Wrench - Parts List

ltem	Part Description	Part Number	Item	Part Description	Part Number
	Housing Assembly	,		Ratchet Housing Assembly	1207-A322
	for 1207MAX-D3	1207MAX-D3-A40	38	Ratchet Housing	
	for 1207MAX-D4	1207MAX-D4-A40	39	Gear Pins (2)	
1	Housing		40	Crankshaft Needle Bearings (2)	
	Composite Housing Assembly			Reversing Collar Kit	1207-K127
	for 1207MAX-D3	1207MAX-D3-A747	41	Ring	
	for 1207MAX-D4	1207MAX-D4-A747	42	Collar	
2	Composite Housing		43	Indexer	
3	Nameplate Label		44	Cam	
	for 1207MAX-D3	1207MAX-D3-301	45	Spring	
	for 1207MAX-D4	1207MAX-D4-301	46	Coupling Nut	1207-27
	Valve Kit	1207-VK	47	Retaining Ring	1207-118
4	Power Regulator			Reversing Gear Kit	1207-K82
5	Regulator O-Ring (top)		48	Gear (large)	
6	Regulator O-Ring (top)		49		
7	Regulator Retaining Pin		50		
- 8	Throttle Valve Seat		51		
9	Throttle Valve			Crankshaft	1207-35
10	Throttle Valve Spring			Drive Bushing	170-36
10	Inlet Bushing Assembly	1207-A565	54		1207-37
11	Inlet Bushing Assembly	1207-A363	34	Ratchet Head Kit	1207-37
12	Inlet Bushing O-Ring		ł	for 1207MAX-D3	1207-D3-TRK1
13	Inlet Bushing O-Ring Inlet Bushing Retaining Pin		ł	for 1207MAX-D3 for 1207MAX-D4	1207-D3-TRK1 1207-D4-TRK1
13	Throttle Lever Kit	1207-LK	55		1207-D4-TRKT
1.4				Friction Ring	
14	Throttle Lever		56		1207-38
15	Throttle Plunger		57	Anvil Assembly	100\/D4 D44
16	Throttle Lever Retaining Pin		ł	for 1207MAX-D3	109XPA-D44
17	Housing O-Ring	107XPA-367	-	for 1207MAX-D4	1099XPA-D44
	Muffler Kit	1207-K311		Pawl Kit	109XPA-K43
18	Muffler		58	Lock Spring	
19	Muffler Screen		59	Lock Pin	
	Exhaust Deflector Assembly	1207-A123	60	Pawl	
20	Exhaust Deflector		61	Pawl Retaining Pin	
21	Warning Label	WARNING-34-99		Spring Kit	109XPA-SK
	Motor Assembly	1207-MK	62	Friction Spring (3 per kit)	
22	End Cap		63	Friction Ball (3 per kit)	
23	Rear Rotor Bearing		64		
24	Rear End Plate		65	Retaining Ring	
25	Cylinder		*	Oil - Ingersoll Rand No. 10 (4 oz. bottle)	10Z4
26	Motor Alignment Pins (2)		. *	Grease	
27	Rotor			IR # 67 (1 lb can) - for Gearing	67-1 LB
28	Vanes (set of 4)	170-42-4	ļ	IR # 67 (8 lb can) - for Gearing	67 8 LB
29	Front End Plate		Į	IR # 70 (1 lb can) - for Ratchet Head	70 1 LB
30	Motor Alignment Pin			IR # 70 (8 lb can) - for Ratchet Head	70 8 LB
31	Front Rotor Bearing			Spline Wrench (for removal of item 33)	170-SW
32	Spacer			Coupling Nut Wrench (for removal of item 46)	1105-CW
	Gearing Kit	1207-GK	*	Handle Clamp Tool	1207-598
33	Internal Gear]		
34	Spindle		J		
35	Planet Gear (3 per kit)				
36	Planet Gear Pin (3 per kit)				
37	Spacer	1207-80	1		

^{*} Not Illustrated.

Parts and Maintenance

When the life of the tool has expired, it is recommended that the tool be disassembled, degreased and parts be separated by material so that they can be recycled.

Tool repair and maintenance should only be carried out by an authorized Service Center.

Refer all communications to the nearest Ingersoll Rand Office or Distributor.

Related Documentation

For additional information refer to:

Air Ratchet Wrench Safety Information Manual 04580361

Air Ratchet Wrench Product Information Manual 45657244.

Manuals can be downloaded from www.ingersollrandproducts.com.

