


---

**2015MAX and 2025MAX Series Angle Air Impactool™ - Exploded View**

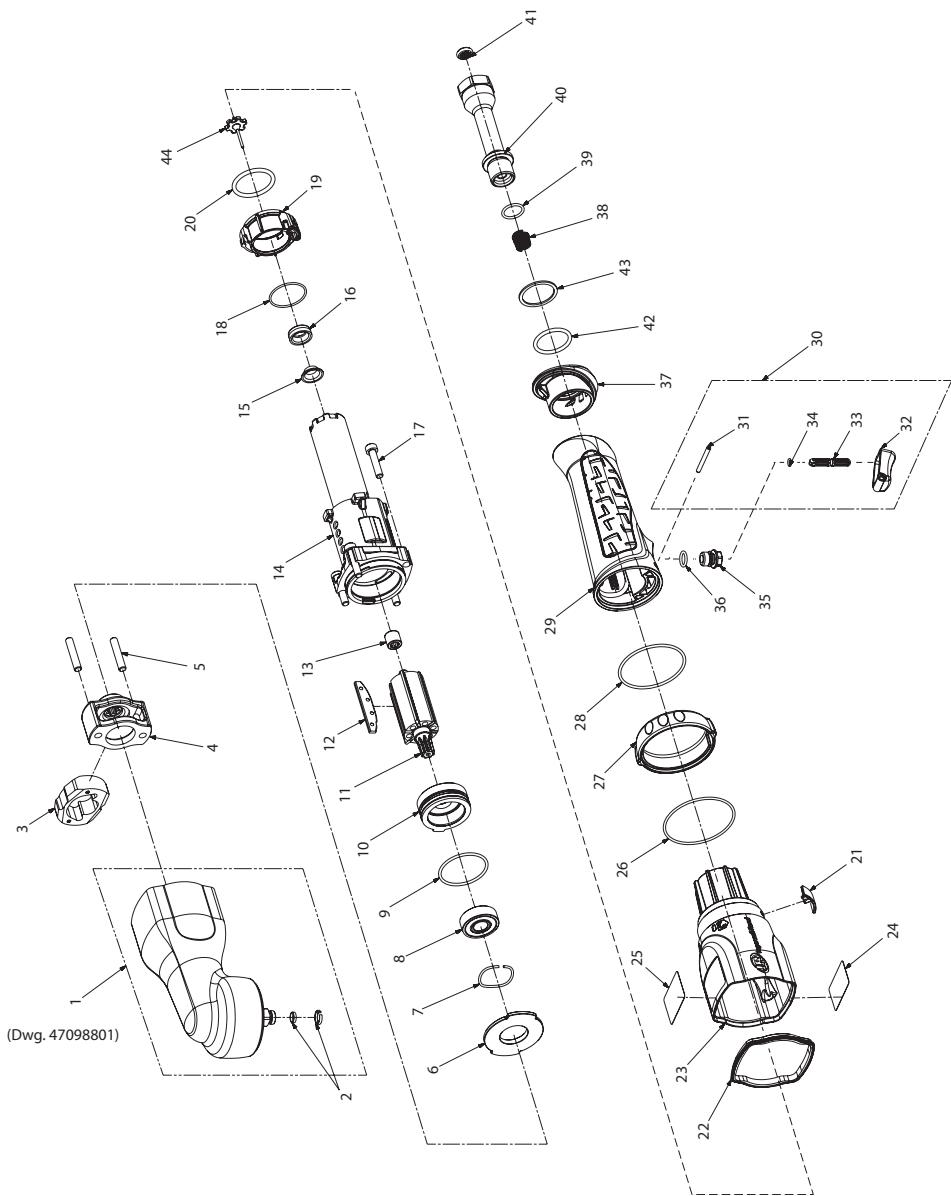

## 2015MAX and 2025MAX Series Angle Air Impactool™ - Parts List

Item	Part Description	Part Number	Item	Part Description	Part Number
1	Anglehead Assembly for model 2015MAX for model 2025MAX	2015-A550 2025-A550	29	Grip	2015-40-B
2	Socket Retainer Kit for model 2015MAX for model 2025MAX	2115-K425 2125QTi-K425	30	Trigger Kit	2015-K93
*	Mechanism Kit	2015-THK	31	Trigger Pin	---
3	Hammer	2015-724	32	Trigger	---
4	Hammer Frame	2015-703	33	Throttle Pin	---
5	Hammer Pin (2 Included in kit)	2015-704	34	O-Ring	---
6	Washer	2015-18A	*	Throttle Bushing Assembly	2015-A781
7	Spring Washer	2015-207	35	Throttle Bushing	---
*	Endplate Assembly	2015-A11	36	O-Ring	---
8	Bearing	WFS182-22	37	Exhaust Cap	2015-123
9	O-Ring	---	*	Inlet Bushing Assembly	2015-A565
10	Endplate	---	38	Spring	---
11	Rotor	2015-53	39	O-Ring	---
12	Vane Pack (6 vanes)	2015-A42-6	40	Inlet Bushing	---
*	Motor Cylinder Assembly	2015-A3	41	Screen	---
13	Bearing	---	*	Inlet Parts Kit	2015-K303
14	Motor Cylinder	---	42	O-Ring	---
15	Seat Support	---	43	Washer	---
16	Valve Seat	---	44	Throttle Valve	---
17	Housing Screws (4 required)	2015-638	15	Seat Support	---
*	Reverse Valve Kit	2015-K329	16	Valve Seat	---
18	O-Ring	---	*	Tune-Up Kit	2015-TK
19	Reverse Valve	---	*	Endplate Assembly	---
20	O-Ring	---	12	Vane Pack (6 vanes)	---
21	Actuator	---	18	O-Ring	---
22	Gasket	2015-36	20	O-Ring	---
*	Motor Housing Assembly for model 2015MAX for model 2025MAX	2015-A40 2025-A40	22	Gasket	---
23	Motor Housing	---	26	O-Ring	---
24	Warning Label	---	28	O-Ring	---
25	Information Label	---	33	Throttle Pin	---
24	Warning Label	WARNING-38-99	34	O-Ring	---
25	Information Label for model 2015MAX for model 2025MAX	2015MAX-301 2025MAX-301	36	O-Ring	---
*	Reverse Ring Kit	2015-K273	*	Inlet Parts Kit	---
26	O-Ring	---	*	Air Care Kit (Grease Gun, Grease, Oil)	105-LBK1
27	Reverse Ring	---	*	Grease (replacement tube for -LBK1)	105-4T
28	O-Ring	---	*	Air Tool Oil (4 oz. bottle)	10Z4
21	Actuator	---	*	Grease (1 lb can)	105-1LB
			*	Protective Boot	2015-BOOT
			*	Service Vise Jaws	2015-K598

\* Not Illustrated

## Parts and Maintenance

When the life of the tool has expired, it is recommended that the tool be disassembled, degreased and parts be separated by material so that they can be recycled.

Tool repair and maintenance should only be carried out by an authorized Service Center.

Refer all communications to the nearest **Ingersoll Rand** Office or Distributor.

## Related Documentation

For additional information refer to:

Air Impact Wrench Product Safety Information Manual 04580916.

Air Impact Wrench Product Information Manual 45537560.

Manuals can be downloaded from [www.ingersollrandproducts.com](http://www.ingersollrandproducts.com).

